

User Manual



B O U N D L E S S

VEXIL

Table of Contents

Getting Started	03
- Stealth Mode.....	03
- Sleep Mode	03
- Charging	03
- Cleaning	04
Warnings & Disclaimers	05
- Isopropyl Alcohol Warning ...	05
- Recommended Cool Down ..	05
- Choking Hazard	05
- Handling the VEXIL.....	06
Contact	07

Getting Started

Stealth Mode

Press and hold the temperature increase and decrease buttons simultaneously for 3 seconds to hide the LEDs for a more discreet experience.

 
To turn off, temperature increase and decrease buttons simultaneously for 3 seconds or restart the device.

Sleep Mode

Press and hold the power button for 3 seconds to enter sleep mode and pause your session. To exit sleep mode press and hold the power button for 3 seconds.

Charging

Insert included USB-C to USB-A Cable into the USB-C Charging Port. Only use a standard 5v USB power outlet or brick.



Cleaning

Cleaning

Regular Upkeep

To ensure a long lifespan of your VEXIL use the included cleaning brush to remove any left over particles from the herb chamber and mouthpiece after every use once the unit has had a moment to cool down.

Deep Cleaning

The Chamber

To clean the chamber, ensure the unit has had a moment to completely cool down. To ensure no alcohol drips into the internals, turn the unit upside down, and after use a q-tip or paper towel soaked with isopropyl alcohol and gently wipe the chamber clean.

The Mouthpiece

Completely disassemble the mouthpiece to clean. Each piece can be cleaned with q-tip or paper towel soaked with isopropyl alcohol. Use caution to not leave the mouthpiece soaking in alcohol as this may damage the materials.

Warnings & Disclaimers

Recommended Cool Down

It is recommended to let the VEXIL cool down after 2 consecutive sessions to ensure a prolonged lifespan of the unit.

Isopropyl Alcohol Warning

Be advised when using isopropyl alcohol to clean your VEXIL. It is recommended to only use isopropyl alcohol for cleaning the chamber or the zirconia spiral and zirconia spiral holder.

Choking Hazard

The VEXIL contains small parts which may be a choking hazard to small children. Keep the device away from children.

Warnings & Disclaimers

Handling the VEXIL

- Do not drop, deform, bend, crush, puncture, incinerate, microwave, shred, paint, or insert foreign objects into a VEXIL or try to repair or modify the VEXIL yourself.
- Do not clean the VEXIL other than instructed by Boundless Technology.
- Do not use a damaged VEXIL charger or non-Boundless Technology charger. Incompatible chargers may carry different voltages which may be a fire hazard.
- Use caution when handling the VEXIL as the heating chamber gets very hot. Refrain from direct contact with the heating chamber when hot or heating up.
- Do not leave the device unattended when it is powered on or while the device is still hot.
- Do not leave in extreme temperatures.
- Do not charge on carpet or bare rug.

Questions or Concerns?

We Are Happy To Help!

Email Us

info@bndlstech.com

For Replacement Parts,
Tutorials, & More

boundlesstechnology.com/VEXIL

Online Retail Store

boundlesstechnology.com

Follow Our Socials



@BNDLSTECH



BOUNDLESS